

PUTRONS VL Illustration of Spare Parts Replacement

浦川 VL 立式泵拆卸换备件示意图



1

Rotate motor stand protective cover

旋转电机座防护罩



2

Rotate to remove cover; unscrew coupling bolts

旋转取出护罩；拧下联轴器螺栓



3

Remove intermediate coupling; remove coupling screw

取出中间联轴器；拧下泵联轴器固定螺钉



4

Remove coupling; unscrew bearing cover and housing bolts

取出泵联轴器；拧下轴承盖和轴承座螺栓



5

Remove bearing cover and housing; remove mechanical seal

取出轴承盖和轴承座；取出机械密封



6

Loosen pump cover bolts; lift pump cover

松掉泵盖螺栓，抬起泵盖



7

Remove pump cover; lift pump shaft and impeller

取出泵盖，抬起泵轴和叶轮



8

Remove pump shaft and impeller

取出泵轴和叶轮